| Category | B Combin | ations fro | om 01/07/2008 | |
|----------|----------|------------|--|---|
| Combina | Question | Show / | | |
| tion | No. | Tell | Question | Answer |
| 1 | B08 | Show | Show me how you would check that the direction indicators are working. | Applying the indicators or hazard warning switch and check functioning of all indicators. (may need to switch ignition on, prompt not to start engine) |
| 1 | B10 | Tell | Tell me how you would check that the brakes are working before starting a journey. | Brakes should not feel spongy or slack. Brakes should be tested as you set off. Vehicle should not pull to one side. |
| 2 | B05 | Tell | Identify where the windscreen washer reservoir is and tell me how you would check the windscreen washer level. | Identify reservoir and explain how to check level. |
| 2 | B09 | Show | Show me how you would check that the brake lights are working on this car. (I can assist you, if you need to switch the ignition on, please don't start the engine) | Operate brake pedal, make use of reflections in windows, garage doors, etc, or ask someone to help. (may need to switch ignition on, prompt not to start engine) |
| 3 | B02 | Show | Show me / explain how you would check that the power assisted steering is working before starting a journey. | If the steering becomes heavy the system may not be working properly. Before starting a journey two simple checks can be made. Gentle pressure on the steering wheel, maintained while the engine is started, should result in a slight but noticeable movement as the system begins to operate. Alternatively turning the steering wheel just after moving off will give an immediate indication that the power assistance is functioning. |
| 3 | B12 | Tell | Tell me where you would find the information for the recommended tyre pressures for this car and how tyre pressures should be checked. | Manufacturer's guide, use a reliable pressure gauge, check and adjust pressures when tyres are cold, don't forget spare tyre, remember to refit valve caps. |

| Category | Category B Combinations from 01/07/2008 | | | | |
|----------|---|--------|---|---|--|
| Combina | Question | Show / | | | |
| tion | No. | Tell | Question | Answer | |
| | | | | Apply footbrake firmly. Demonstrate by applying | |
| | | | Show me how you would check the parking brake | parking brake (handbrake) so that when it is fully | |
| | | | (handbrake) for excessive wear, make sure you | applied it secures itself, and is not at the end of the | |
| 4 | B04 | Show | keep safe control of the vehicle | working travel. | |
| | | | Identify where the windscreen washer reservoir is | | |
| | | | and tell me how you would check the windscreen | | |
| 4 | B05 | Tell | washer level. | Identify reservoir and explain how to check level. | |
| | | | Open the bonnet, identify where you would check | | |
| | | | the engine oil level and tell me how you would | Identify dipstick / oil level indicator, describe check | |
| 5 | B01 | Show | check that the engine has sufficient oil. | of oil level against the minimum/maximum markers. | |
| | | | | Manufacturer's guide, use a reliable pressure | |
| | | | Tell me where you would find the information for | gauge, check and adjust pressures when tyres are | |
| | | | the recommended tyre pressures for this car and | cold, don't forget spare tyre, remember to refit | |
| 5 | B12 | Tell | how tyre pressures should be checked. | valve caps. | |
| | | | Open the bonnet, identify where you would check | Identify high/low level markings on header tank | |
| | | | the engine coolant level and tell me how you would | where fitted or radiator filler cap, and describe how | |
| 6 | B03 | Show | check that the engine has the correct level. | to top up to correct level. | |
| | | | | The head restraint should be adjusted so the rigid | |
| | | | | part of the head restraint is at least as high as the | |
| | | | Tell me how you make sure your head restraint is | eye or top of the ears, and as close to the back of | |
| | | | correctly adjusted so it provides the best protection | the head as is comfortable. N.B. Some restraints | |
| 6 | B18 | Tell | in the event of a crash | might not be adjustable | |

| Category | Category B Combinations from 01/07/2008 | | | | |
|----------|---|--------|--|---|--|
| Combina | Question | Show / | | | |
| tion | No. | Tell | Question | Answer | |
| | | | Open the bonnet, identify where the brake fluid | | |
| | | | reservoir is and tell me how you would check that | Identify reservoir, check level against high/low | |
| 7 | B07 | Show | you have a safe level of hydraulic brake fluid. | markings. | |
| | | | Tell me how you would check the tyres to ensure | No cuts and bulges, 1.6mm of tread depth across | |
| | | | that they have sufficient tread depth and that their | the central ³ / ₄ of the breadth of the tyre and around | |
| 7 | B13 | Tell | general condition is safe to use on the road. | the entire outer circumference. | |
| | | | Show me how you would check that the horn is | Check is carried out by using control (turn on | |
| 8 | B06 | Show | working (off road only). | ignition if necessary). | |
| | | | Tell me how you would check the tyres to ensure | No cuts and bulges, 1.6mm of tread depth across | |
| | | | that they have sufficient tread depth and that their | the central ³ / ₄ of the breadth of the tyre and around | |
| 8 | B13 | Tell | general condition is safe to use on the road. | the entire outer circumference. | |
| | | | | Brakes should not feel spongy or slack. Brakes | |
| | | | Tell me how you would check that the brakes are | should be tested as you set off. Vehicle should not | |
| 9 | B10 | Tell | working before starting a journey. | pull to one side. | |
| | | | Show me how you would clean the windscreen | Operate control to wash and wipe windscreen (turn | |
| 9 | B14 | Show | using the windscreen washer and wipers | ignition on if necessary. | |
| | | | | Explanation: Operate switch (turn on ignition if | |
| | | | | necessary), then walk round vehicle. (As this is a | |
| | | | Tell me how you would check that the headlights & | "Tell Me" question, there is no need to physically | |
| 10 | B11 | Tell | tail lights are working. (No need to exit vehicle) | check the lights.) | |
| | | | | Set all relevant controls including; fan, temperature, | |
| | | | Show me how you would set the demister controls | air direction / source and heated screen to clear | |
| | | | to clear all the windows effectively, this should | windscreen and windows. Engine does not have to | |
| 10 | B15 | Show | include both front and rear screens | be started for this demonstration | |

| Category B Combinations from 01/07/2008 | | | | |
|---|----------|--------|---|--|
| Combina | Question | Show / | | |
| tion | No. | Tell | Question | Answer |
| | | | Show me how you would switch on the rear fog | Operate switch (turn on dipped headlights and |
| | | | light(s) and explain when you would use it/them. | ignition if necessary). Check warning light is on. |
| 11 | B16 | Show | (No need to exit vehicle) | Explain use. |
| | | | Tell me how you would know if there was a | Warning light should illuminate if there is a fault |
| 11 | B19 | Tell | problem with your anti lock braking system | with the anti lock braking system |
| | | | Show me how you would check that the brake | Operate brake pedal, make use of reflections in |
| | | | lights are working on this car. (I can assist you, if | windows, garage doors, etc, or ask someone to |
| | | | you need to switch the ignition on, please don't | help. (may need to switch ignition on, prompt not to |
| 12 | B09 | Show | start the engine) | start engine) |
| | | | | Explanation: Operate switch (turn on ignition if |
| | | | | necessary), then walk round vehicle. (As this is a |
| | | | Tell me how you would check that the headlights & | "Tell Me" question, there is no need to physically |
| 12 | B11 | Tell | tail lights are working. (No need to exit vehicle) | check the lights.) |
| | | | Show me how you switch your headlight from | |
| | | | dipped to main beam and explain how you would | Operate switch (with ignition or engine on if |
| 13 | B17 | Show | know the main beam is on whilst inside the car | necessary), check with main beam warning light |
| | | | Tell me how you would know if there was a | Warning light should illuminate if there is a fault |
| 13 | B19 | Tell | problem with your anti lock braking system | with the anti lock braking system |